

CATTLEMAN INSTALLATION SHEET

07-10 CHEVY 3/4 TON HD



PART # 1128

- Step 1: Remove 2 factory side nuts close to the front of the frame.
- Step 2: On the driver side you may have to take the factory bolt bracket and put it inside out so you will be able to bolt it on the outside of the frame as shown:
- Step 3: Place bottom bracket on the outside of the frame and through the tow hook opening and bolt on with the factory bolt and nut as shown:
- Step 4: Remove inside factory bumper bolt that is on top of the frame. Place "Z" bracket facing in and bolt on with the same factory bolt as shown:
- Step 5: Place top "Z" bracket to the inside "Z" bracket as shown:
- Step 6: Put grille guard in place, bolt on bottom bracket and then on the top "Z" bracket as shown:
- Step 7: Check alignment on the grille guard and tighten bolts.

INSTALLATION KIT

- 2- 1/2 x 2" BOLT
- 6- 1/2 x 1 1/2" BOLT
- 8- 1/2" NUT
- 8- 1/2" LOCK WASHER
- 8- 1/2" FLAT WASHER

NOTE: You may have to periodically retighten bolts.

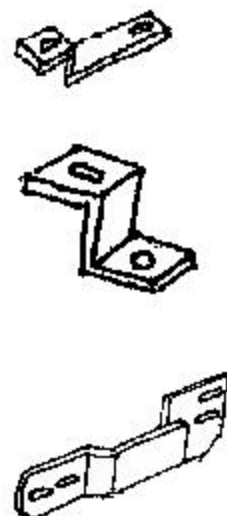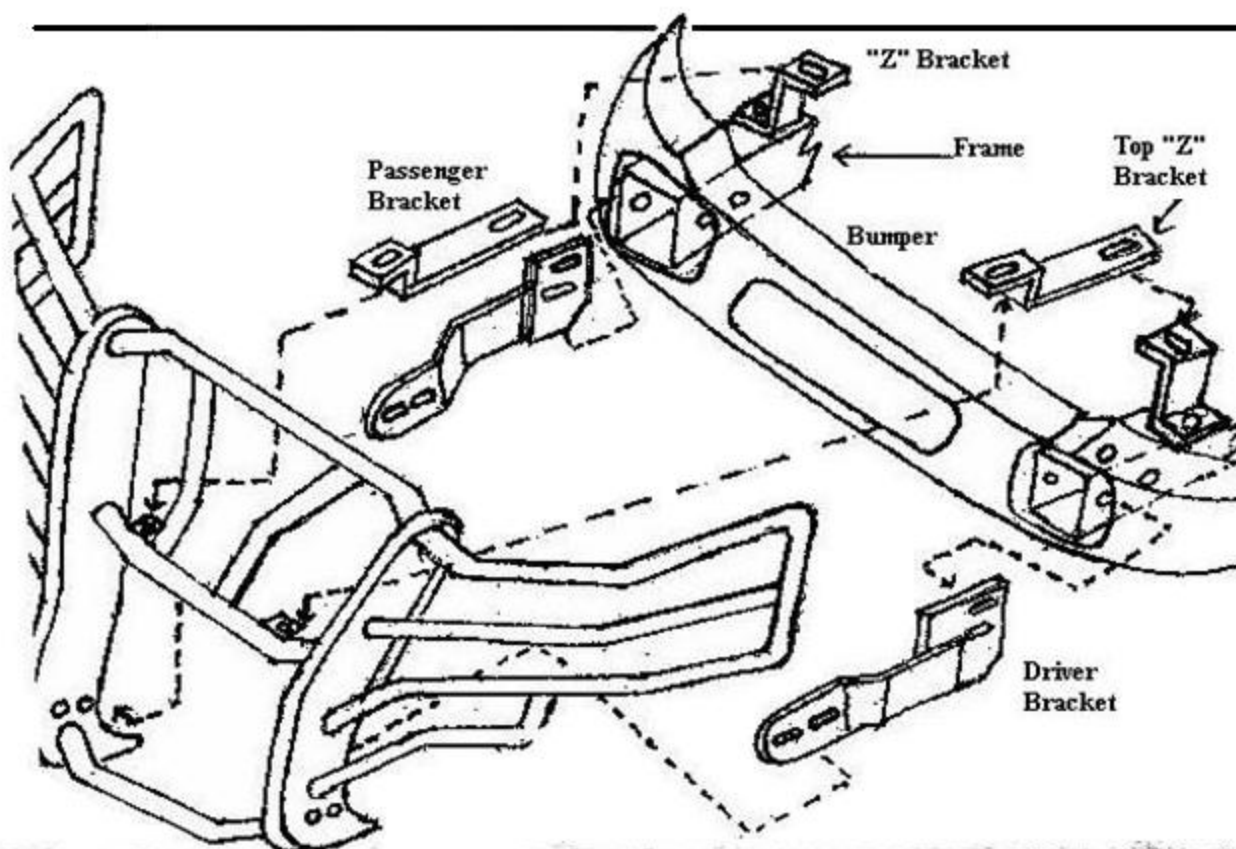

www.cattlemanhd.com

