

CATTLEMAN INSTALLATION SHEET

2011 CHEVY 3/4 TON HD



PART # 1129

- Step 1: Remove the top plastic guard, then remove inside factory bumper bolt on the top of the frame.
- Step 2: Put "Z" bracket on top of the frame and bolt on with the same factory bolts. Both "Z" brackets are facing inside as shown:
- Step 3: Put flat bracket to the grille guard tabs and on the top of the "Z" bracket and bolt on:
- Step 4: Remove tow hooks place bottom bracket on the outside of the frame and through the tow hook opening. You may need to cut the plastic on the side of the opening to clear bracket. Put tow hooks back on with factory bolts.
- Step 5: On driver side you may have to take factory bolt bracket and put it inside out. So you can bolt the bracket on the outside as shown:
- Step 6: Put grille guard in place and bolt on bottom bracket and then on top "Z" bracket as shown:
- Step 7: Check alignment on the grille guard and tighten bolts, when complete put plastic guard back

NOTE: You may have to periodically retighten bolts.

INSTALLATION KIT

- 2- 1/2 x 2" BOLT
- 6- 1/2 x 1 1/2" BOLT
- 8- 1/2" NUT
- 8- 1/2" LOCK WASHER
- 8- 1/2" FLAT WASHER

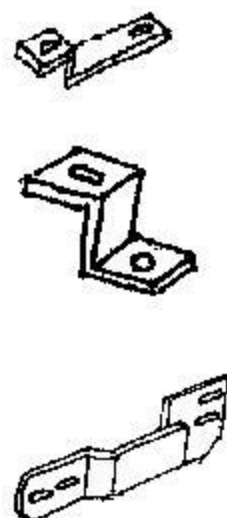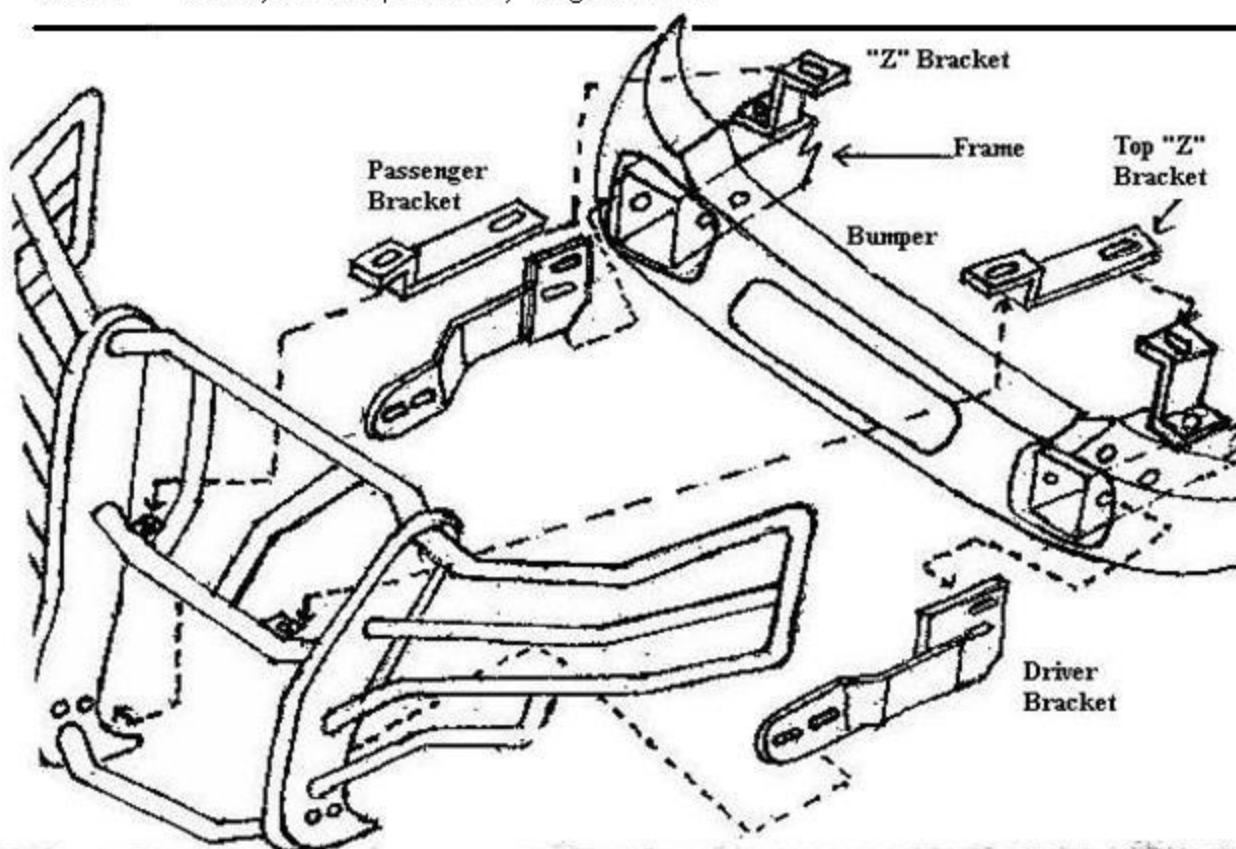

www.cattlemanhd.com

