

CATTLEMAN INSTALLATION SHEET

2015 CHEVY 2500 HD WRAPAROUND WITHOUT SENSORS

Part # 1130

INSTALLATION KIT:

- 8 - 1/2" X 1-1/2" BOLT
- 8 - 1/2" NUT
- 8 - 1/2" LOCK WASHER
- 16 - 1/2" FLAT WASHER

INSTRUCTIONS:

STEP 1 - REMOVE FRONT GRILL.

STEP 2 - PUT DOUBLE "L" BRACKET TO THE BUMPER FLAT FACTORY BRACKET. THEY GO ON THE TWO INSIDE TOP BOLTS. DOUBLE "L" BRACKETS SHOULD FACE IN AS SHOWN.


STEP 3 - PUT TOP BRACKET ON THE TOP OF THE DOUBLE "L" BRACKET AND BOLT ON.

STEP 4 - FOR THE BOTTOM BRACKET REMOVE TOW HOOKS. PUT BRACKET ON THE OUTSIDE OF THE FRAME. THEN PUT TOW HOOKS BACK IN PLACE AND BOLT ON WITH THE SAME FACTORY BOLT, ONE ON THE SIDE AND ONE ON THE BOTTOM.

STEP 5 - PUT GRILL GUARD IN PLACE.

STEP 6 - CHECK ALIGNMENT ON GRILL GUARD AND TIGHTEN BOLTS.

STEP 7 - YOU MAY NEED TO PERIODICALLY RETIGHTEN THE BOLTS.

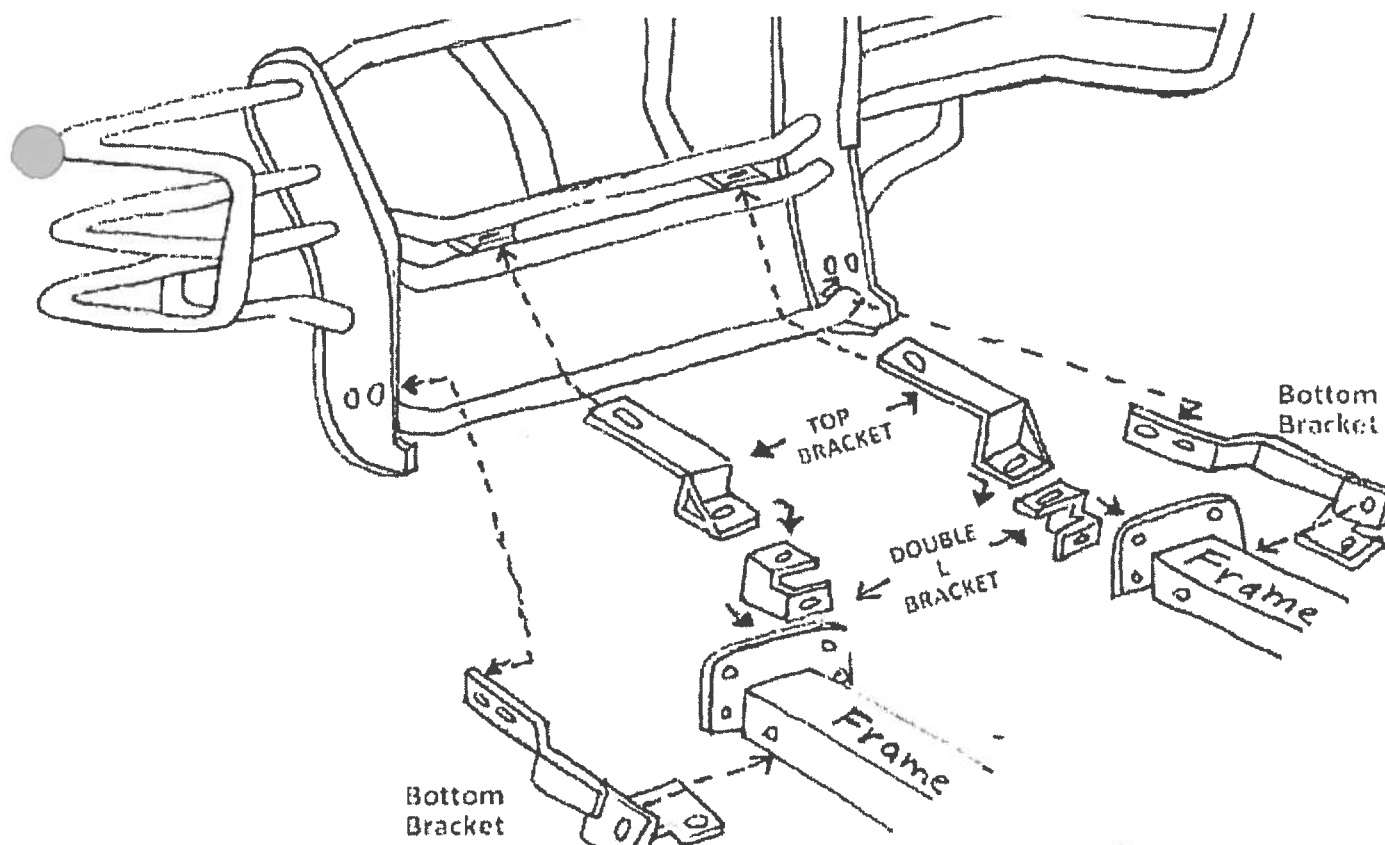

www.cattlemanhd.com

