

CATTLEMAN INSTALLATION SHEET


07-10 CHEVY SUBURBAN
07-10 CHEVY TAHOE

PART # 1140

INSTALLATION KIT

10- 1/2 x 1 1/2" BOLT
2- 1/2 x 5" BOLT
12- 1/2" NUT
12- 1/2" LOCK WASHER
24- 1/2" FLAT WASHER

- Step 1: Remove tow hooks if any. Remove plastic insert in tow hook area. Remove 4 clips 2 on top 2 on bottom.
- Step 2: There is a left and right bracket slide bracket through the bumper opening and against the frame as shown:
- Step 3: If Suburban has tow hooks, place them back in the frame and use one of the short tow hook bolts and one 1/2 x 5" bolt to install bracket per side.
- Step 4: If Suburban does not have tow hooks use three 1/2 x 1 1/2" bolts to install the brackets on both sides.
- Step 5: Place bracket against the frame and tighten all bolts.
- Step 6: Place grille guard on the outside of the mounting brackets put two 1/2 x 1 1/2" bolt on each side and bolt on.
- Step 7: Check alignment and tighten all bolts.

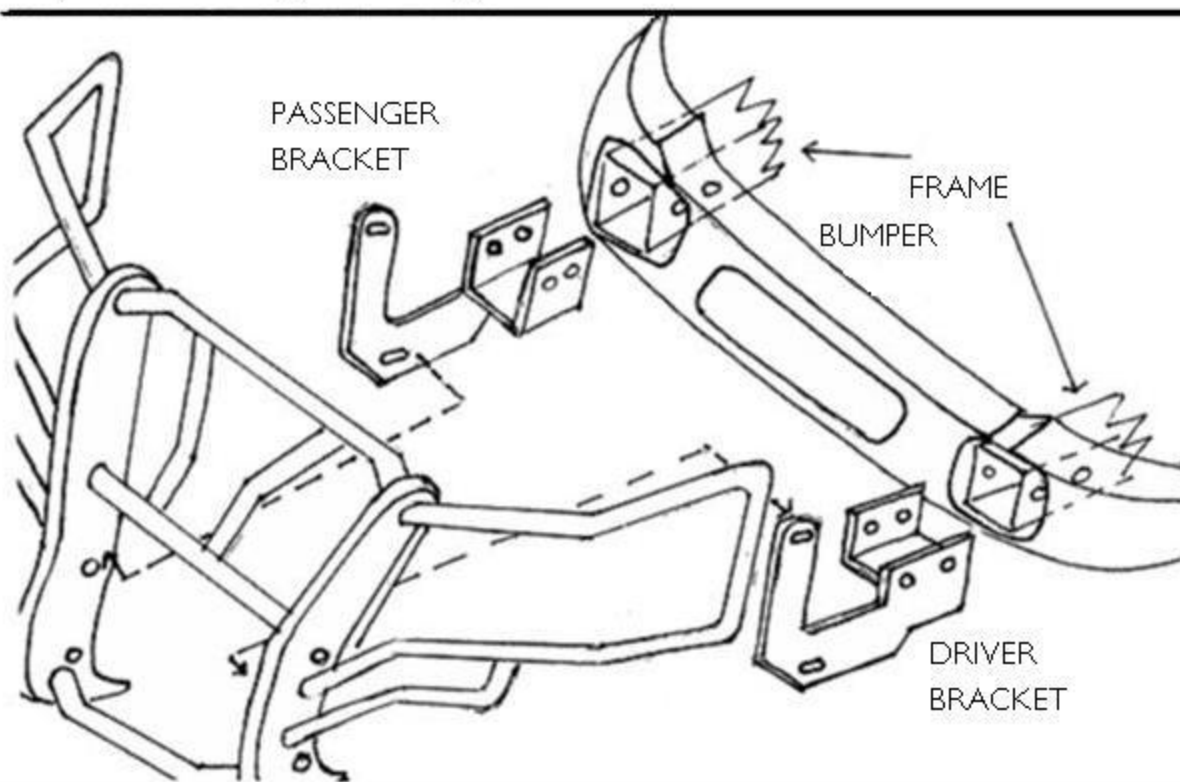

www.cattlemanhd.com

