

CATTLEMAN INSTALLATION SHEET

2015 Suburban 1500 W/ Sensors

Part # 1142

Installation Kit:

5 – ½" x 1-1/2" Bolt G5	2 – 5/16" x 1" Bolt G5
6 – ½" Nut	2 – 5/16" Nut
6 – ½" Lock Washer	2 – 5/16" Lock Washer
12 – ½" Flat Washer	2 – 5/16" Flat Washer

Instructions:


STEP 1 – On the front factory bumper on the center there is a plastic trim. Need to cut out an opening where tow hook should be to allow mounting bracket through.

STEP 2 – Put bracket on to the frame and bolt on bolts on the side and on the bottom frame.

STEP 3 – Put grill guard on the outside and on the bottom of frame bracket and bolt on.

STEP 4 – Check alignment and tighten bolts.

STEP 5 – You may need to periodically retighten the bolts.

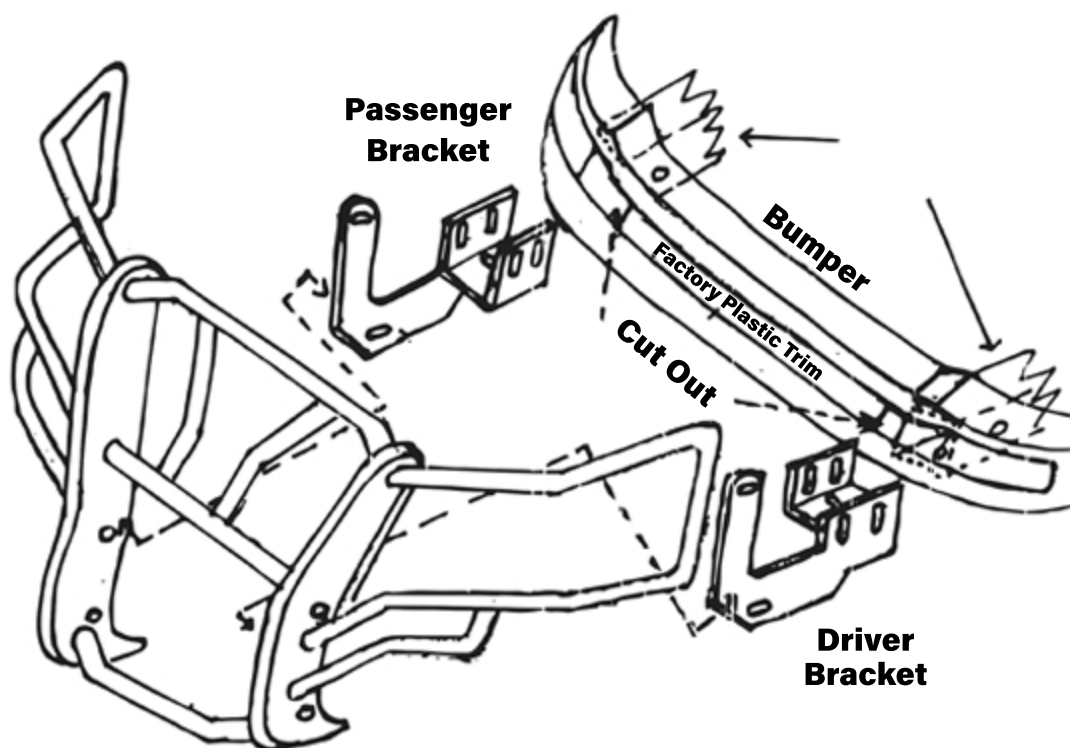

www.cattlemanhd.com

