

# CATTLEMAN INSTALLATION SHEET

## 05-08 CHEVY COLORADO


## PART # 1180

- Step 1: Place bppt shape bracket between frame as shown: Bolt on with two  $1/2 \times 4 1/2$ " bolts on each side
- Step 2: On the side of the frame closest to the front, there is a bracket welded to the frame. Remove top factory bolt and the place "C" bracket on top of frame. Use same factory bolts as shown:
- Step 3: Remove or notch bottom plastic trim
- Step 4: Place grille guard on the outside of the boot bracket and bolt on with two  $1/2 \times 1 1/2$ " bolts on each side.
- Step 5: Place flat bar bracket on top of "C" bracket and on the grille guard tabs as shown:
- Step 6: Check alignment and tighten bolts.

### INSTALLATION KIT

- 4-  $1/2 \times 4 1/2$ " BOLT
- 8-  $1/2 \times 1 1/2$ " BOLT
- 12-  $1/2$ " NUT
- 12-  $1/2$ " LOCK WASHER
- 24-  $1/2$ " FLAT WASHER

NOTE: You may have to periodically retighten bolts.

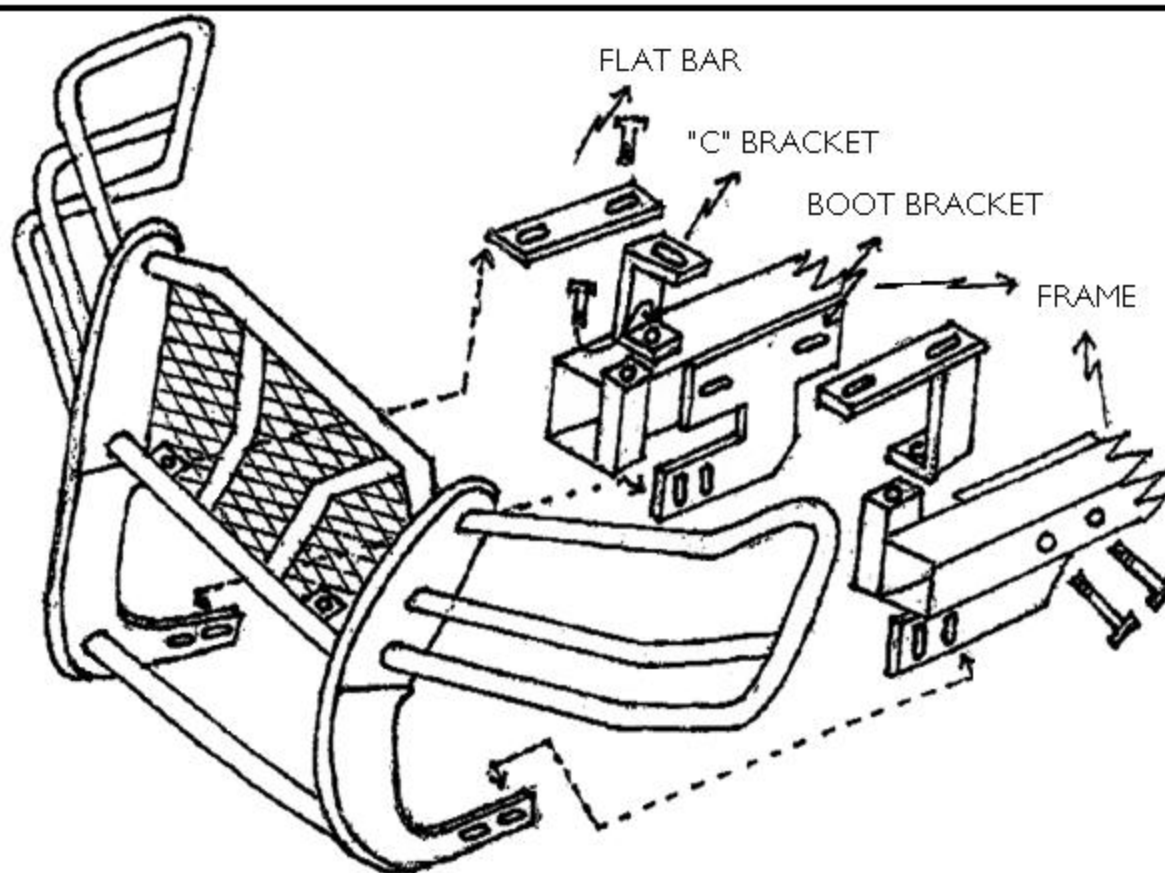

[www.cattlemanhd.com](http://www.cattlemanhd.com)

