

CATTLEMAN INSTALLATION SHEET


06-09 DODGE 2500

PART # 1223


- Step 1: Remove inside bumper nuts and place inside bracket as shown short leg to the top.
- Step 2: Place "Z" bracket to the grille guard tap place grille guard to the front end of truck and bolt "Z" bracket to the top of the inside bracket.
- Step 3: Place bottom bracket on the side of the upright, so you'll be able to mark and to cut a hole on the plastic guard. Then bolt to grille guard and the bottom inside brackets.
- Step 4: Check alignment on the grille guard and tighten bolts

NOTE: You may have to periodically retighten the bolts

GRILLE GUARD MOUNT

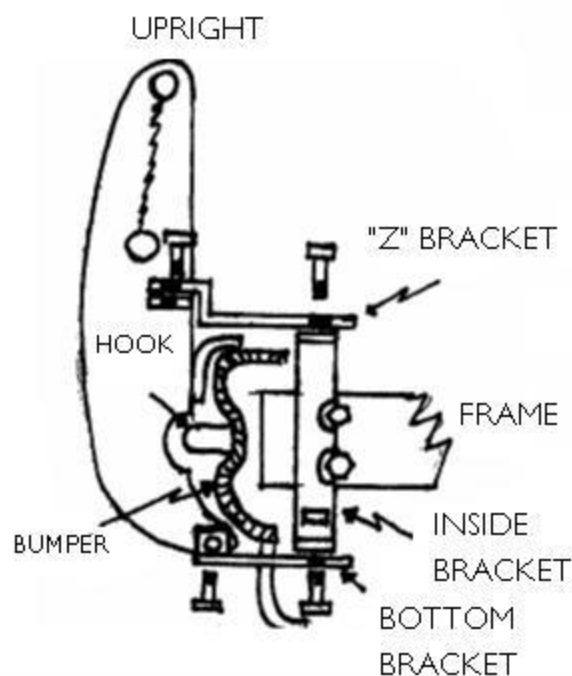

INSIDE BRACKET MOUNT

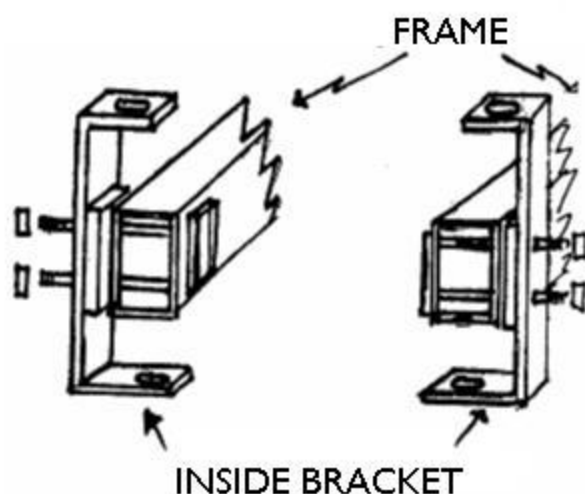

www.cattlemanhd.com

