

CATTLEMAN INSTALLATION SHEET





10-11 DODGE 2500/3500

PART # 1227

- Step 1: Remove the two factory bolts at the bottom of the tow hooks.
DO NOT remove tow hooks ONLY the bolts.
- Step 2: Put "T" bracket in place and bolt on with 2 3/8 x 2 grade 8 bolts as shown:
- Step 3: Remove two inside factory bumper nuts, put inside bracket on the outside of the frame and bolt on with the same factory nuts. Both legs to face the inside as shown:
- Step 4: Place bottom bracket on the inside of the upright, so you can mark and cut a hole on the plastic gaurd. Then bolt to grille guard and to the bottom inside bracket.
- Step 5: Check alignment on the grille guard and tighten bolts.
- Step 6: You may need to periodically re-tighten bolts.

INSTALLATION KIT

4- 3/8" GRADE 8 BOLT	6- 1/2x1/2" BOLT
4- 3/8" GRADE 8 NUT	2- 1/2x2" BOLT
4 3/8" LOCK WASHER	8- 1/2" NUT
8- 3/8" FLAT WASHER	8- 1/2" LOCK WASHER
	16- 1/2" FLAT WASHER

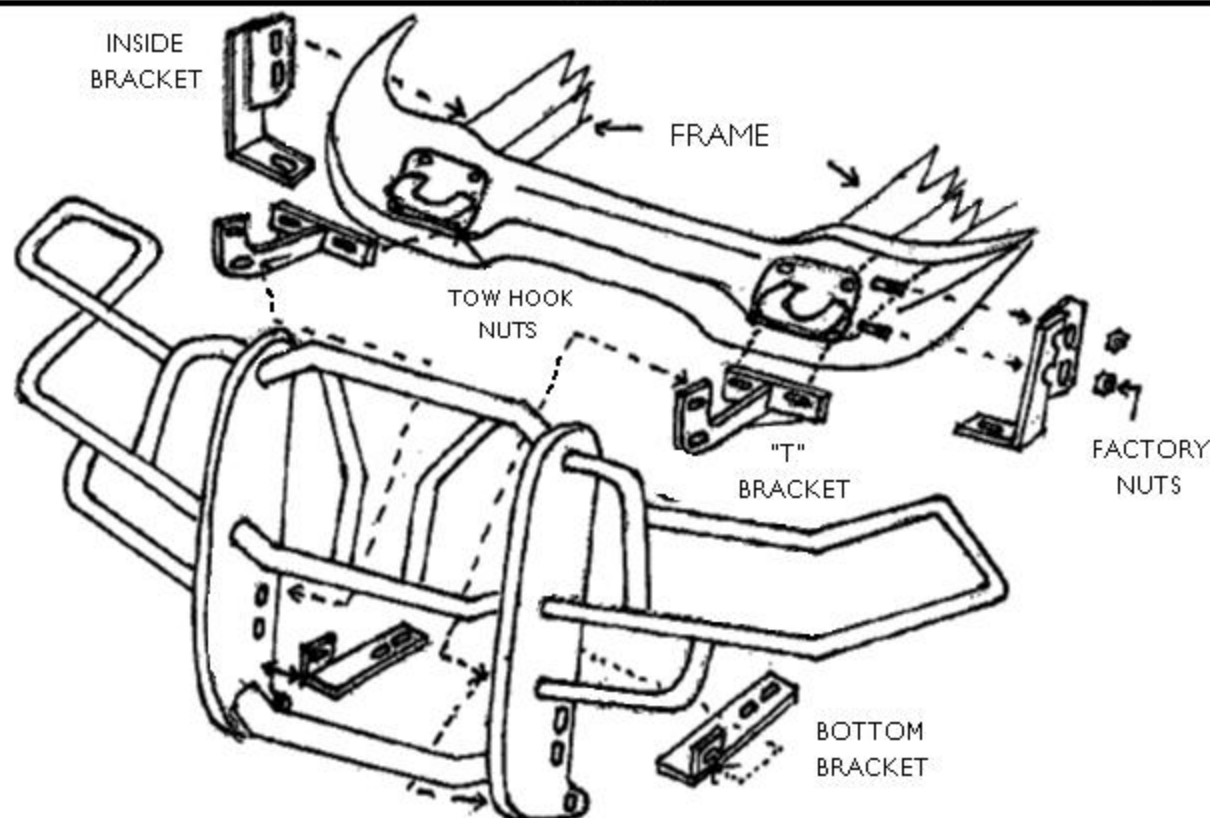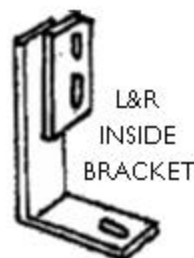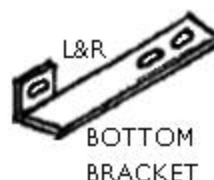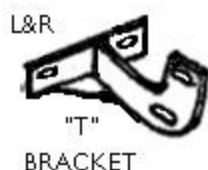

www.cattlemanhd.com

