

CATTLEMAN INSTALLATION SHEET

04-07 FORD F 150 W/ HDLIGHT BARS


PART # 1312

INSTALLATION KIT


- 2- 1/2x2" BOLT
- 10- 1/2x1 1/2" BOLT
- 12 1/2" NUT
- 12- 1/2" LOCK WASHER
- 24- 1/2" FLAT WASHER

- Step 1: Remove tow hook bolts. Place bottom bracket under the tow hook and bolt with the same bolts as shown:
- Step 2: place grille guard on the outside of the bottom bracket as shown:
- Step 3: Bolt bottom bracket to upright and to the center hole with center bracket as shown: On the center bracket use a square washer in the front as shown:
NOTE: Place center bracket on the front of the factory bracket.
- Step 4: Check alignment on the grille guard and tighten bolts.

GRILLE GUARD MOUNT DRIVER SIDE

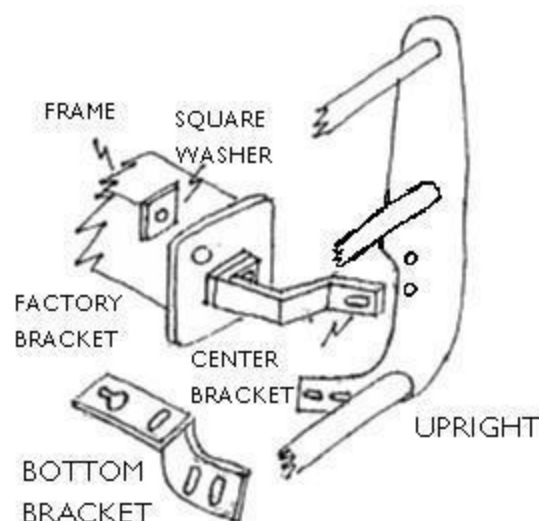

BRACKET MOUNT DRIVER SIDE

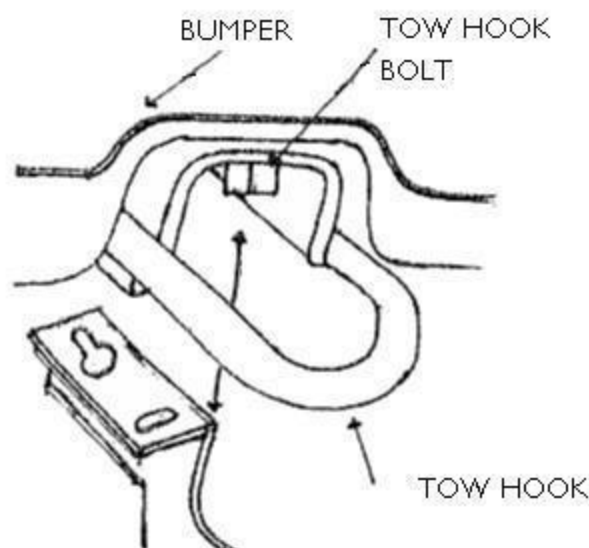

www.cattlemanhd.com

