


CATTLEMAN INSTALLATION SHEET

97-03 FORD F150 W/ HDLIGHT BARS

PART # 1315

- Step 1: Bolt bracket to the outside of frame as shown:
- Step 2: Grille guard bolts on the inside of brackets.
NOTE: DO NOT remove hooks
- Step 3: On the 4x4 you DO NOT have to notch bottom plastic
- Step 4: On 2x4 you HAVE to notch bottom plastic

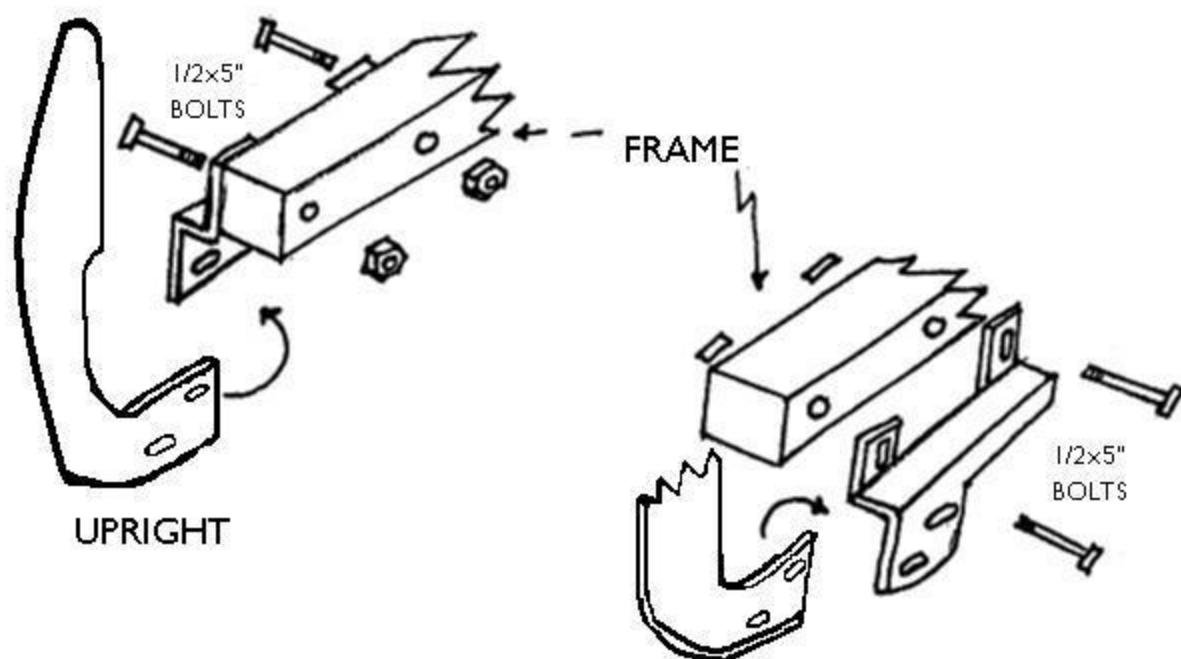

www.cattlemanhd.com

