

CATTLEMAN INSTALLATION SHEET

08-10 FORD SUPERDUTY



PART # I350

INSTALLATION KIT

8- 1/2x2" BOLT 2- 1/2x1 1/2" BOLT
10- 1/2" NUT 10- 1/2" LOCK WASHER
20- 1/2" FLAT WASHER

- Step 1: Remove 2 factory bolts on each side of the bumper
- Step 2: Place side bracket on the outside of the frame and bolt on to the back of the front bumper support bracket and to the side of the frame as shown:
- Step 3: Mount grille guard in place. Bolt grille guard with 4 1/2x2" bolts.
- Step 4: place "Z" bracket on top of the factory bumper. Remove factory bolt from the back of the bumper and bolt on the grille guard tabs as shown:
- Step 5: Check alignment on the grille guard and tighten bolts.

NOTE: You may need to periodically retighten bolts

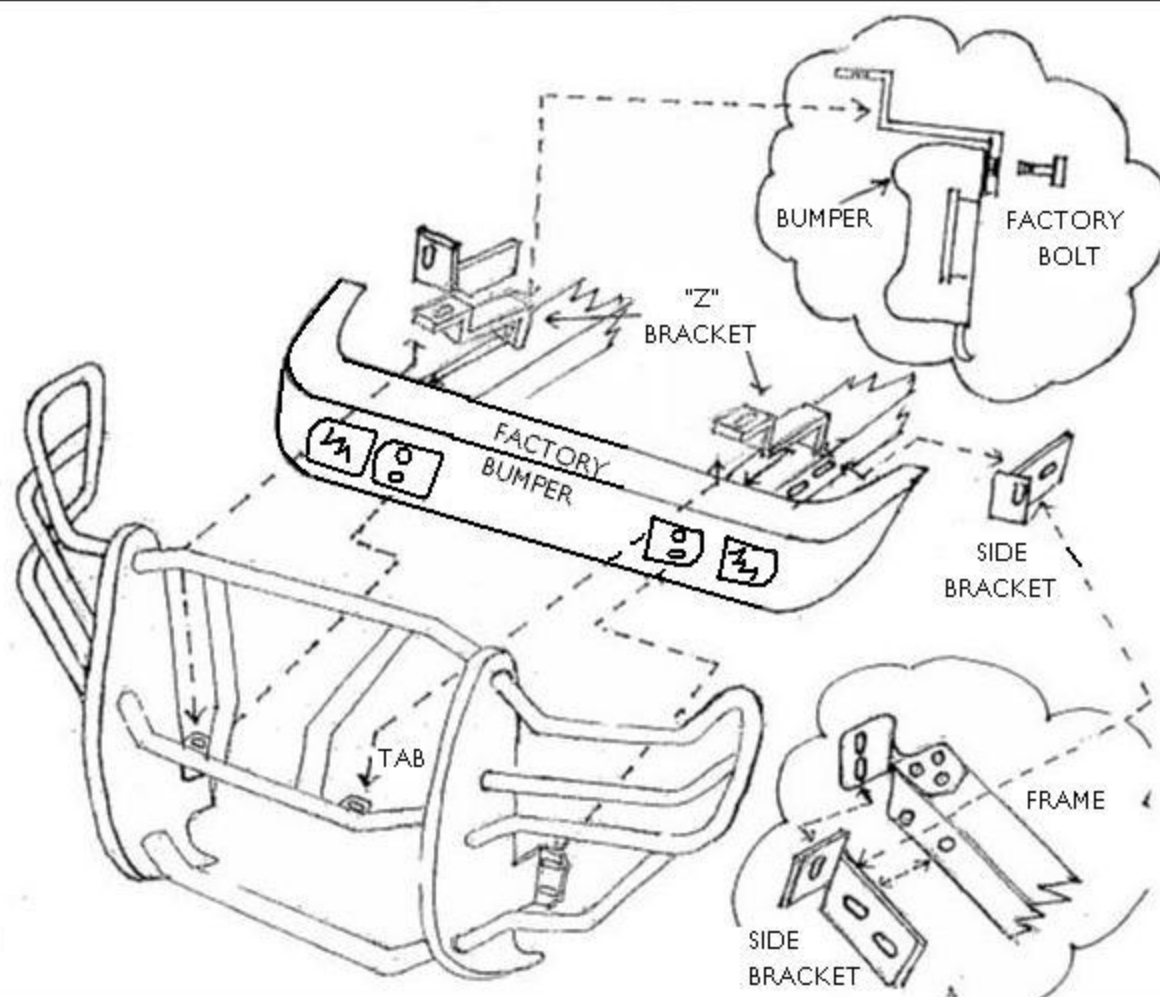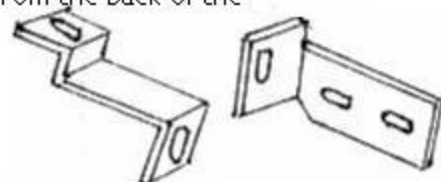

www.cattlemanhd.com

