

# CATTLEMAN INSTALLATION SHEET


## 08-10 FORD SUPERDUTY

**PART # 1353**


### INSTALLATION KIT

8- 1/2x2" BOLT    2- 1/2x1 1/2" BOLT  
10- 1/2" NUT    10- 1/2" LOCK WASHER  
20- 1/2" FLAT WASHER

- Step 1: Remove 2 factory bolts on each side of the bumper
- Step 2: Place side bracket on the outside of the frame and bolt on to the back of the front bumper support bracket and to the side of the frame as shown:
- Step 3: Mount grille guard in place. Bolt grille guard with 4 1/2x2" bolts.
- Step 4: place "Z" bracket on top of the factory bumper. Remove factory bolt from the back of the bumper and bolt on the grille guard tabs as shown:
- Step 5: Check alignment on the grille guard and tighten bolts.

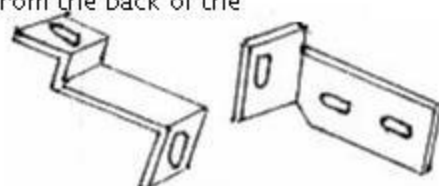

NOTE: You may need to periodically retighten bolts

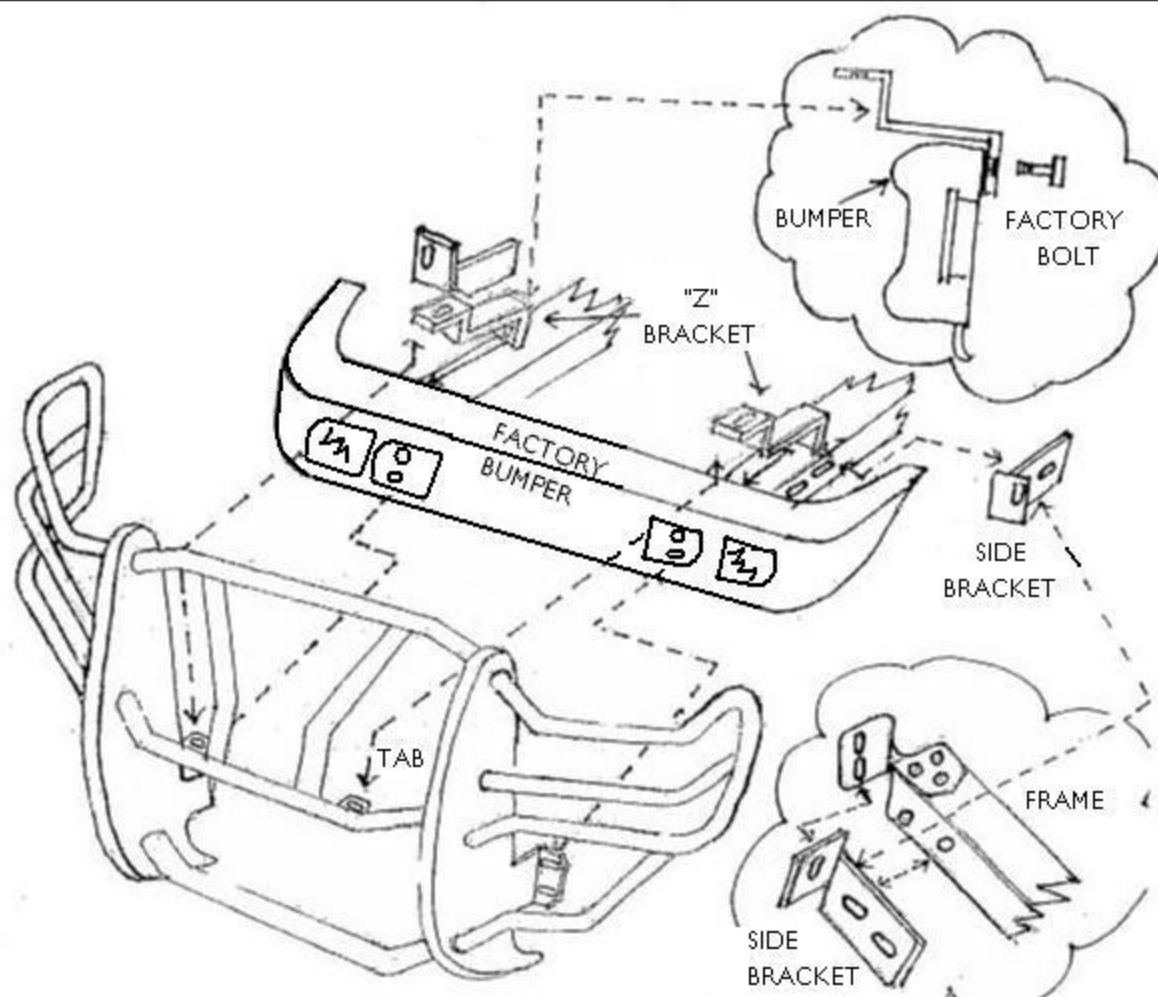

[www.cattlemanhd.com](http://www.cattlemanhd.com)

