

CATTLEMAN INSTALLATION SHEET

04-11 NISSAN TITAN


PART # 1510

INSTALLATION KIT

6- 1/2x 1 1/2" BOLT	4- 12Mx40Mx1.25
6- 1/2" NUT	4- FLAT WASHER
6- 1/2" LOCK WASHER	4- NUT
12- 1/2" FLAT WASHER	

- Step 1: Remove front grille then the 4 bolts behind the grille (2 on each side)
- Step 2: Place top bracket in between the two factory bolts as shown:
- Step 3: Place bottom bracket on the bottom of the frame. There are two factory nuts welded on the inside of the frame as shown:
- Step 4: Bolt grille guard to the bottom bracket and then to the top bracket.
- Step 5: Check alignment of the grille guard and tighten bolts.

GRILLE GUARD MOUNT

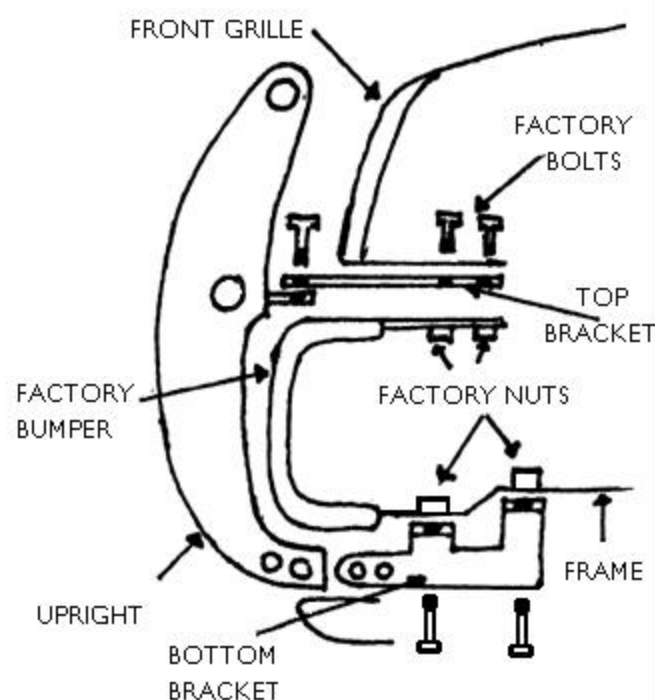

BRACKET MOUNT

