

# CATTLEMAN INSTALLATION SHEET

## 07-11 TOYOTA TUNDRA


## PART # 1526

### INSTALLATION KIT

6- 1/2 x 1 1/2" BOLT  
6- 1/2" NUT  
6- 1/2" LOCK WASHER  
12- 1/2" FLAT WASHER

- Step 1: Remove 2 screws on the bottom of the plastic tire guard, under the factory bumper. You may also have to remove the rivet on the side of the frame. This is so you can get to the bumper bolts as shown:
- Step 2: There are 3 nuts that support the factory bumper on each side, remove the top nut then put the offset bracket in place and bolt on as shown:
- Step 3: Remove tow hooks. Place bottom angle bracket on first then tow hooks bolt back using same factory bolts as shown:
- Step 4: Put grille guard in place, bolt on the bottom angle bracket and the center bracket to the uprights as shown:
- Step 5: Check alignment then tighten bolts.

NOTE: You may have to periodically retighten bolts.

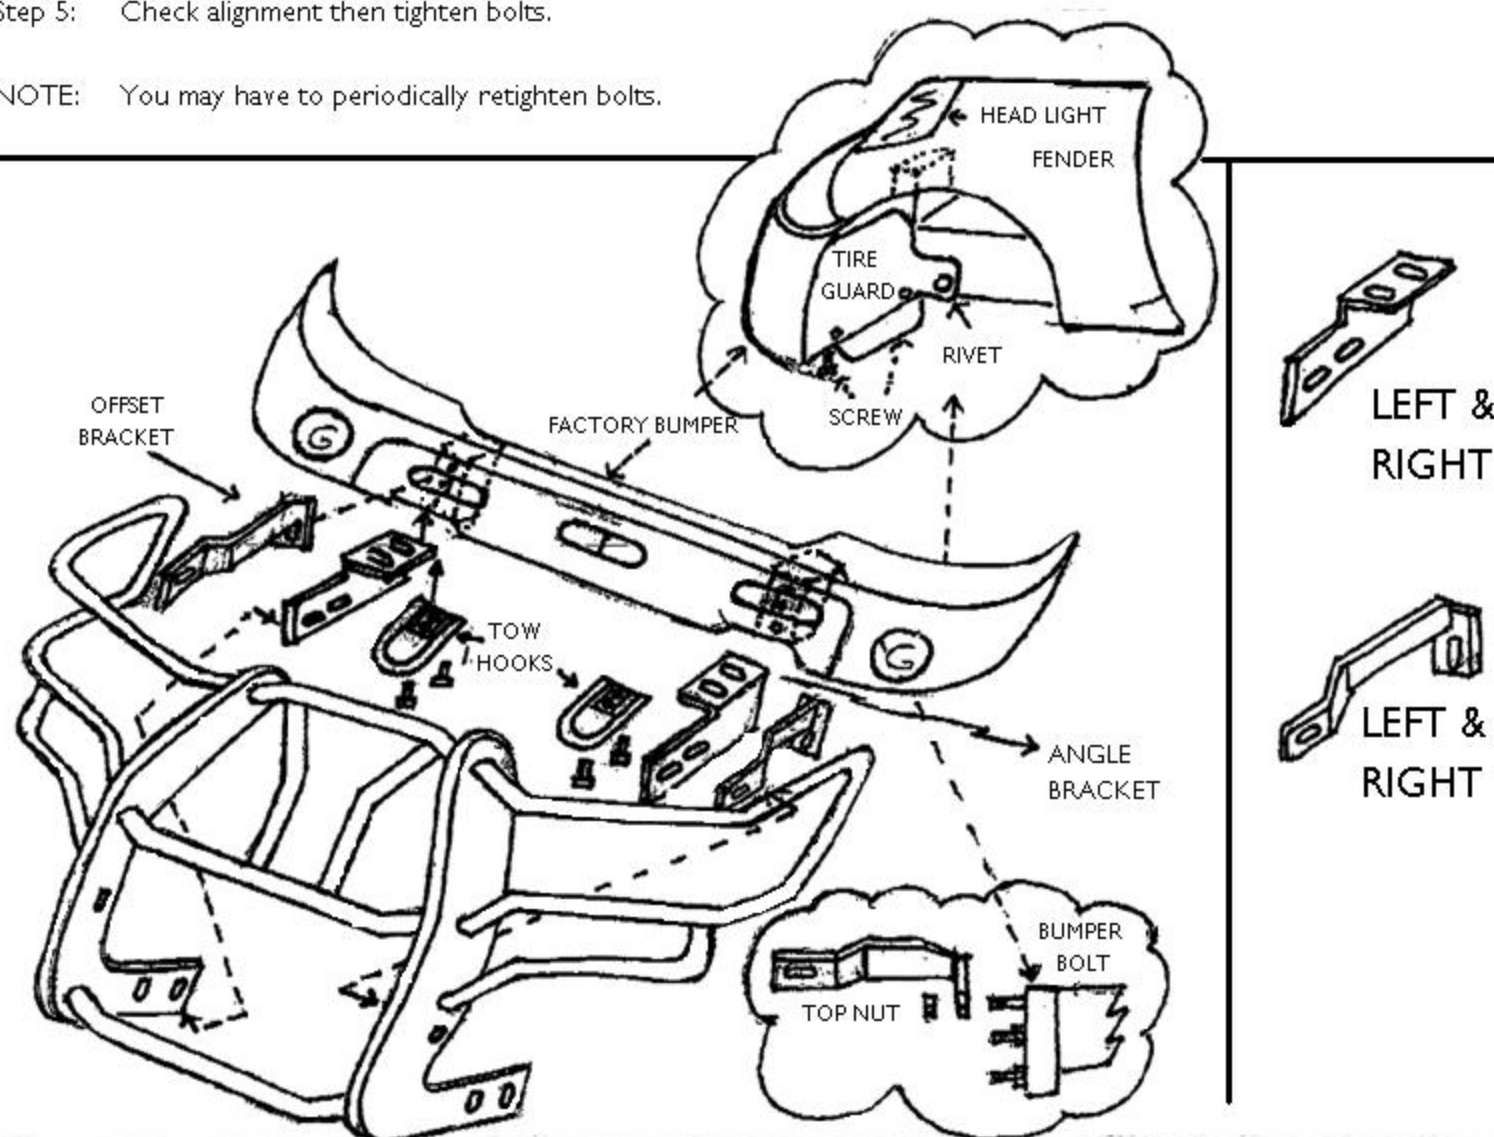

[www.cattlemanhd.com](http://www.cattlemanhd.com)

