

CATTLEMAN INSTALLATION SHEET

88-98 CHEVY ALL MODELS

PART #2135

88-98 GMC ALL MODELS

INSTALLATION KIT

WRAP	LIC. PLATE
6- 1/2x2" BOLT	2-1/4 x 3/4" BOLT
6- 1/2" NUT	2-1/4" NUT
6- 1/2" LOCK WASHER	2-1/4" LOCK WASHER
12- 1/2" FLAT WASHER	2-1/4" FLAT WASHER

Step 1: Remove factory bumper.


Step 2: Place front end replacement bumper to the front end of trunk.

Step 3: Bolt replacement horn to the inside of the box frame and bolt top strap to the top of the box frame use same top bolt that you removed as shown:


Step 4: Check alignment on the replacement bumper and tighten bolts.

NOTE: You may have to periodically retighten bolts.

REPLACEMENT MOUNT

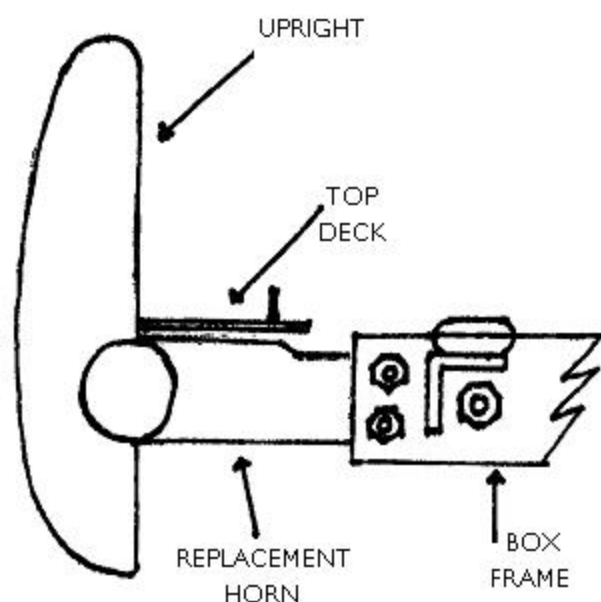

BRACKET MOUNT

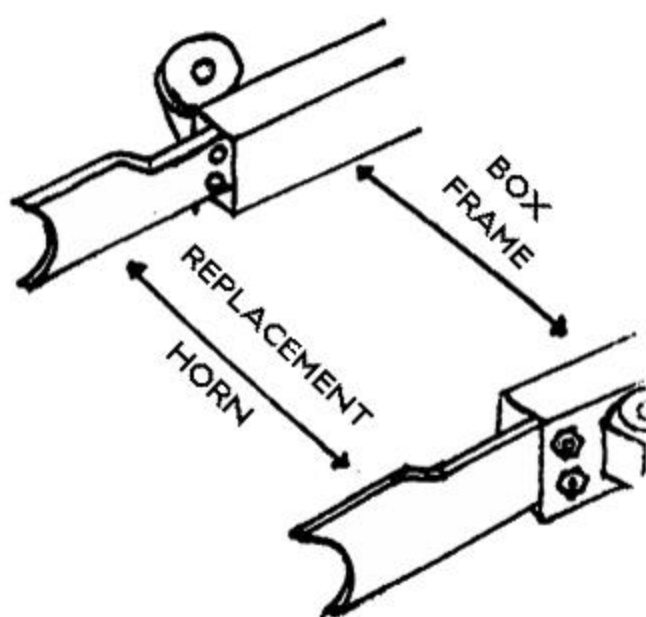

www.cattlemanhd.com

