

# CATTLEMAN INSTALLATION SHEET

94-01 DODGE 1500 REPLACEMENT  
02 DODGE 2500 REPLACEMENT

PART # 2200

## INSTALLATION KIT

WRAP	LIC. PLATE	LIGHT BOLTS
6 - 1/2 X 2" BOLT	2 - 1/4 X 3/4" BOLT	4 - 5/16" NUT
6 - 1/2" NUT	2 - 1/4" NUT	4 - 5/16" FLAT WASHER
6 - 1/2" LOCK WASHER	2 - 1/4" LOCK WASHER	4 - 5/16" LOCK WASHER
12 - 1/2" FLAT WASHER	2 - 1/4" FLAT WASHER	


STEP 1: Remove front bumper.

STEP 2: Mount replacement bumper to the inside of the frame as shown on AA.


STEP 3: Remove the light with bracket from front bumper.

STEP 4: Place light bracket on the back of the replacement 4" pipe as shown.

### REPLACEMENT MOUNT

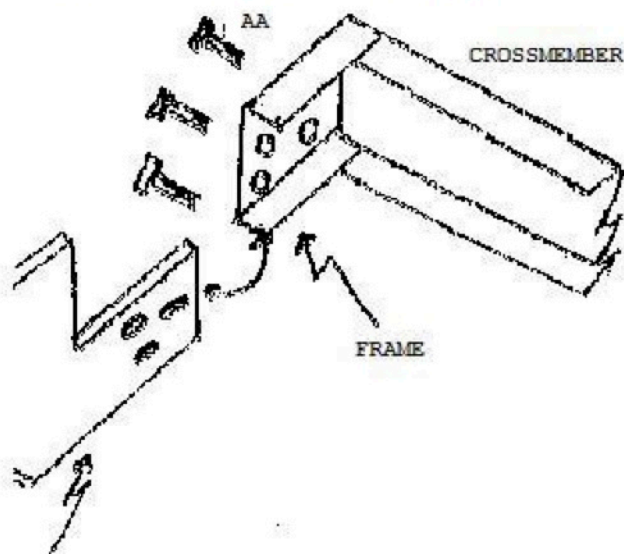

### LIGHT MOUNT

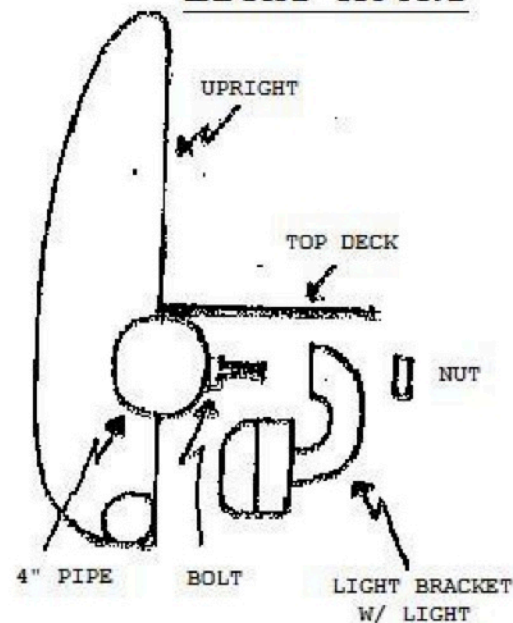

[www.cattlemanhd.com](http://www.cattlemanhd.com)

