

# CATTLEMAN INSTALLATION SHEET

06-08 DODGE 1500 BULLNOSE

# 2208

## BOLTS


4 - 1/2" x 1 1/2" Bolt  
4 - 1/2" Nut  
4 - 1/2" Lock Washer  
8 - Flat Washerv

## Lic Plate


2 - 1/4" x 3/4" Bolt  
2 - 1/4" Nut  
2 - 1/4" Nut  
2 - 1/4" Lock Washer  
2 - 1/4" Flat Washer

- Step 1** - Remove the two bolts on the top side of the radiator bracket, remove rubber spacers (not shown)
- Step 2** - To remove factory bumper, you will need to push on the top of the radiator to the back and up so you will be able to remove factory bolt.
- Step 3** - Remove lights with the bracket and tabs. Bolt bracket to the replacement and place plastic caps on the hole using the same bolts.
- Step 4** - Place front end replacement on the outside of the frame as shown.
- Step 5** - Check alignment on the replacement bumper and tighten bolts.

## REPLACEMENT MOUNT

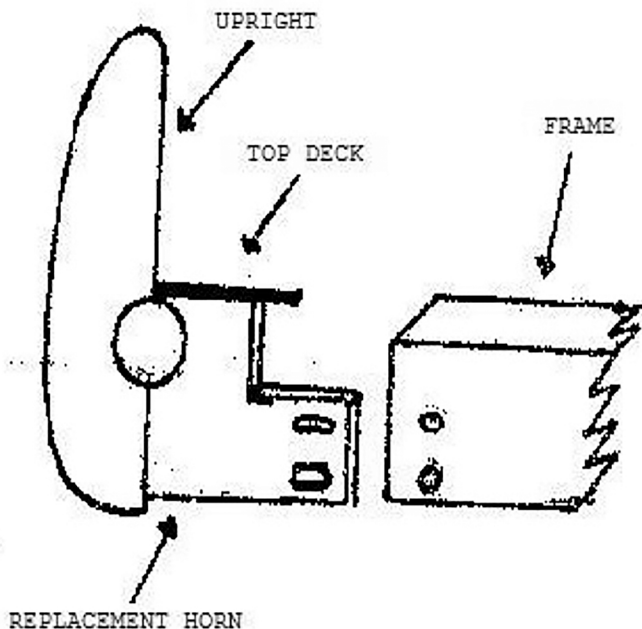

## HORN MOUNT

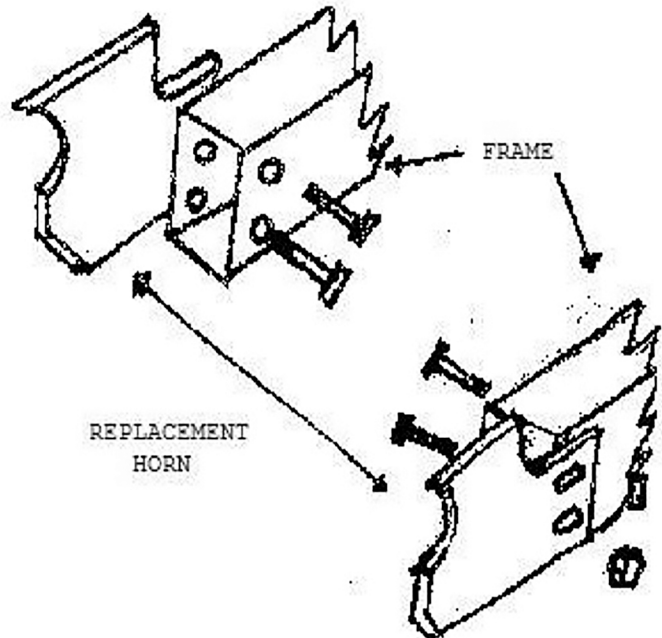

[www.cattlemanhd.com](http://www.cattlemanhd.com)

