

CATTLEMAN INSTALLATION SHEET

2002-2005 DODGE 1/2 REPLACEMENT

PART # 2230

INSTALLATION KIT

WRAP	LIC. PLATE
4 - 1/2 X 5" BOLT	2 - 1/4 X 3/4" BOLT
4 - 1/2" NUT	2 - 1/4" NUT
4 - 1/2" LOCK WASHER	2 - 1/4" LOCK WASHER
8 - 1/2" FLAT WASHER	2 - 1/4" FLAT WASHER


STEP 1: Remove factory bumper.

STEP 2: Place front end replacement bumper on the outside of the frame as shown.


STEP 3: Remove the lights with bracket to the replacement tabs and place plastic caps on the light hole. Use the same bolts. If bumper does not have lights, place the plastic caps on the hole.

STEP 4: Check alignment on the replacement bumper and tighten bolts.

REPLACEMENT MOUNT

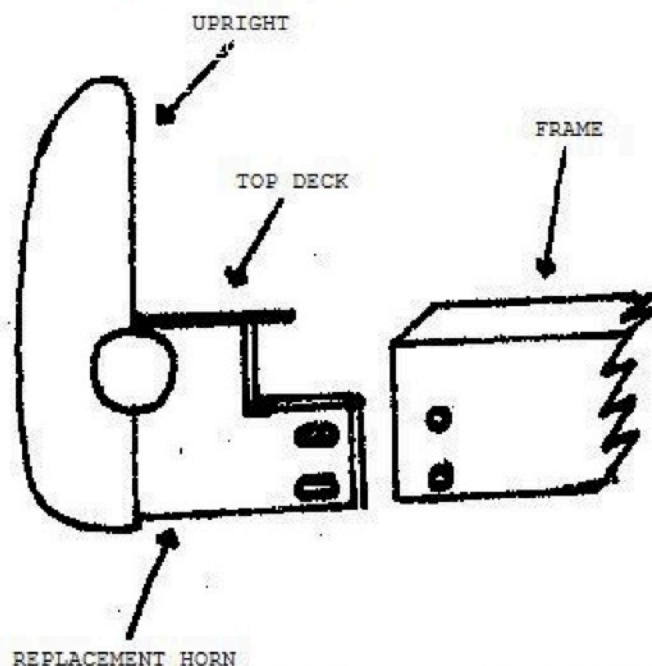

HORN MOUNT

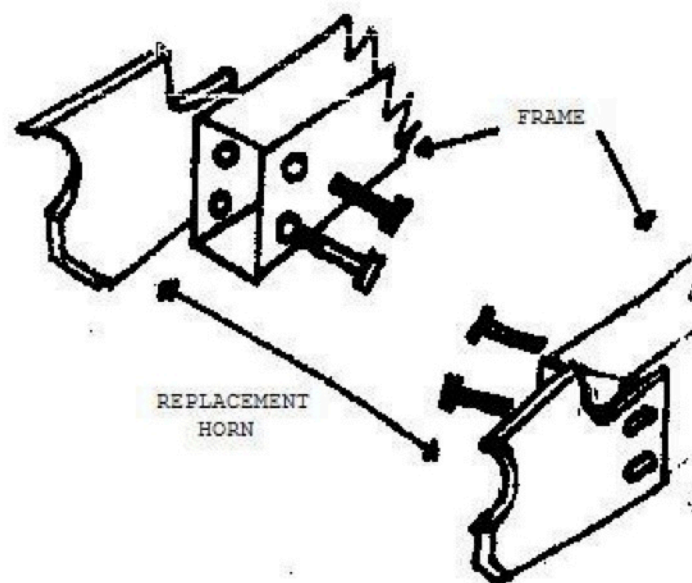

www.cattlemanhd.com

