

CATTLEMAN INSTALLATION SHEET

06-08 DODGE RAM 1500
06-08 DODGE RAM 1500 W/RECEIVER

2240P
2240PR

8- 1/2 X 2" BOLTS	LIC. PLATE
8- 1/2" NUTS	2- 1/4" X 3/4" BOLTS
8- 1/2" LOCK WASHER	2- 1/4" NUTS
8- 1/2" FLAT WASHER	2- 1/4" LOCK WASHERS
	2- 1/4" FLAT WASHERS


STEP 1 REMOVE FACTORY BUMPER

STEP 2 PLACE FRONT-END REPLACEMENT ON THE FLAT FRMAE BRACKET AS SHOWN

STEP 3 CHECK ALIGNMENT ON THE REPLACEMENT BUMPER AND TIGHTEN BOLTS

STEP 4 REMOVE FACTORY LIGHTS AND PLACE THEM ON THE LIGHT HOLES WITH THE SAME FACTORY BOLTS

NOTE: YOU MAY NEED TO PERIODICALLY RE-TIGHTEN BOLTS

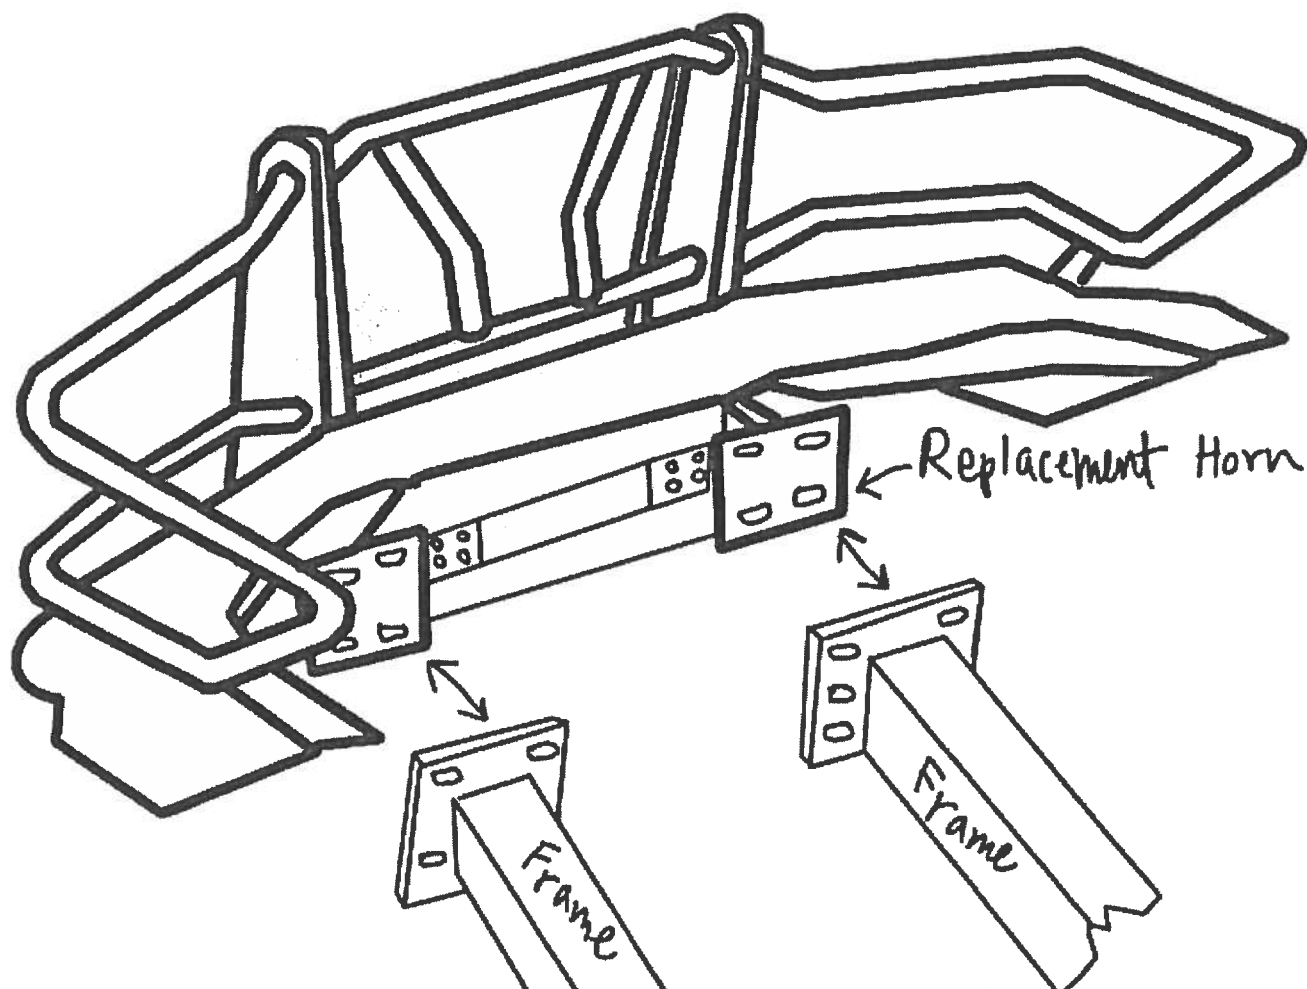

www.cattlemanhd.com

