


# CATTLEMAN INSTALLATION SHEET

09-12 DODGE 1500 REPLACEMENT  
09-12 DODGE 1500 REPLACEMENT WITH RECEIVER

PART #2242  
PART #2242PR

10 - 1/2" x 1-1/2" BOLT Grade 8	LIC. PLATE 2 - 1/4" X 3/4" BOLTS
10 - 1/2" NUT	2 - 1/4" NUTS
10 - 1/2" LOCK WASHER	2 - 1/4" LOCK WASHER
20 - 1/2" FLAT WASHER	2 - 1/4" FLAT WASHER

- STEP 1 REMOVE FACTORY BUMPER.
- STEP 2 PLACE FRONT END REPLACEMENT ON THE FLAT FRAME BRACKET AS SHOWN:
- STEP 3 CHECK ALIGNMENT ON THE REPLACEMENT BUMPER AND TIGHTEN BOLTS.
- STEP 4 REMOVE FACTORY LIGHT AND PLACE THEM ON THE LIGHT HOLES WITH THE SAME FACTORY BOLTS.
- STEP 5 YOU MAY NEED TO PERIODICALLY RE-TIGHTEN BOLTS.

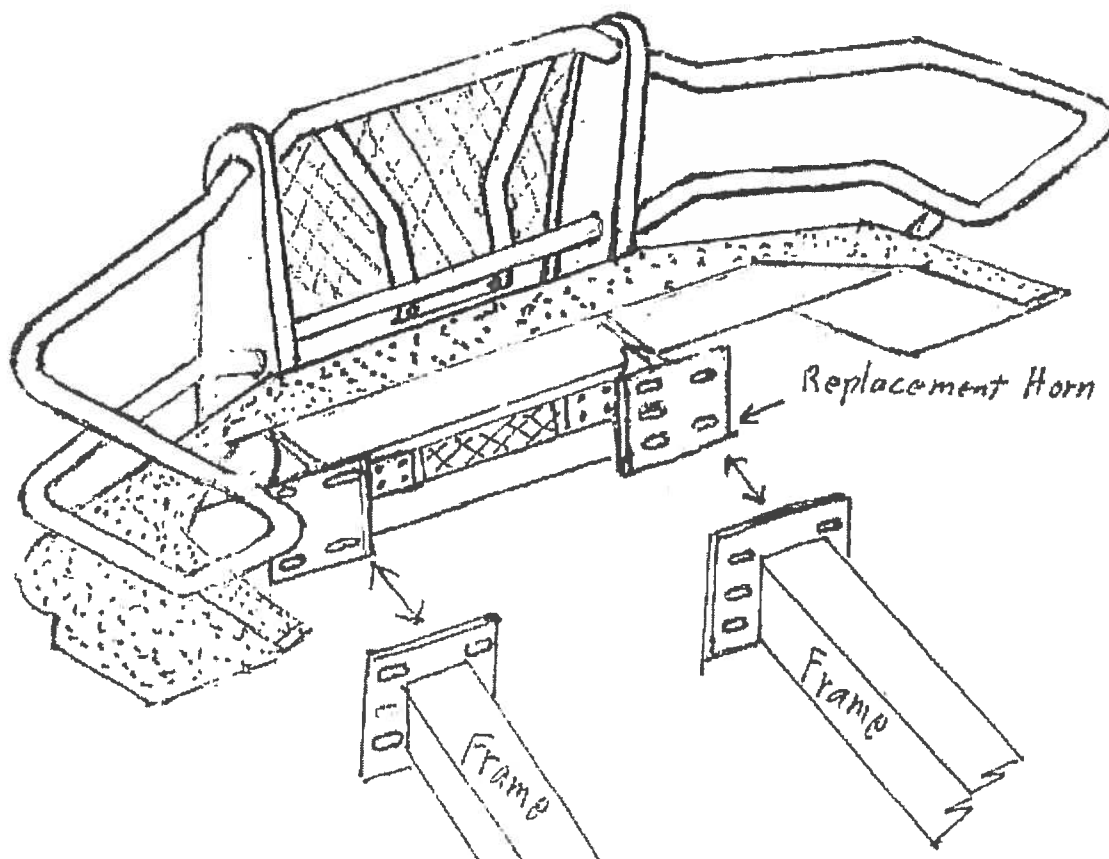

[www.cattlemanhd.com](http://www.cattlemanhd.com)

