

CATTLEMAN INSTALLATION SHEET

2003-2005 DODGE 3/4 TON REPLACEMENT
2006-2007 DODGE 3/4 TON REPLACEMENT


PART # 2247

INSTALLATION KIT


WRAP	LIC. PLATE
4 - 1/2 X 4 1/2" BOLT	2 - 1/4 X 3/4" BOLT
4 - 1/2" NUT	2 - 1/4" NUT
4 - 1/2" LOCK WASHER	2 - 1/4" LOCK WASHER
8 - 1/2" FLAT WASHER	2 - 1/4" FLAT WASHER

- STEP 1: Remove the two bolts on the top side of the radiator bracket and remove rubber spacers (not shown).
- STEP 2: To remove the factory bumper you need to push on the top of the radiator to the back and up so you will be able to remove factory bolt.
- STEP 3: Remove the lights with bracket and tabs. Bolt bracket to the replacement and place plastic caps on the hole using the bolts you removed.
- STEP 4: Place front end replacement on the outside of the frame as shown.
- STEP 5: Check alignment on the replacement bumper and tighten bolts.

REPLACEMENT MOUNT

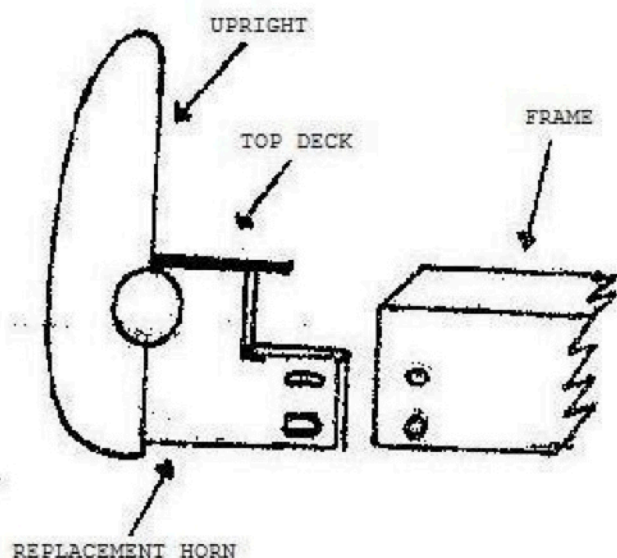

HORN MOUNT

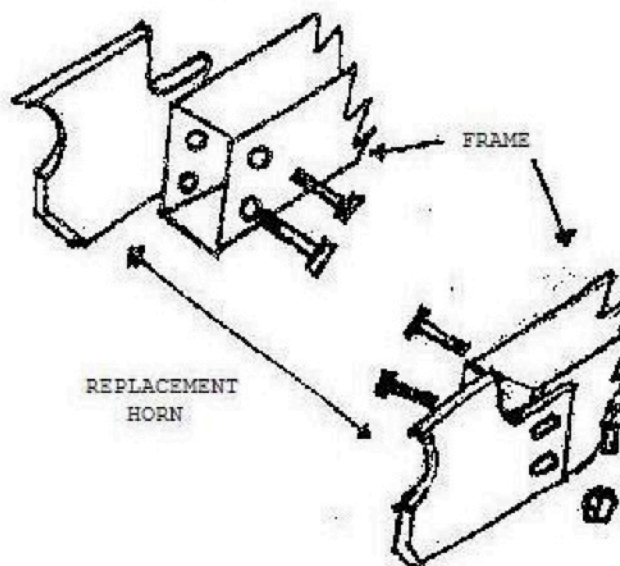

www.cattlemanhd.com

