

CATTLEMAN INSTALLATION SHEET

97-03 FORD F150 REPLACEMENT


PART # 2315

WRAP	LIC. PLATE
4 - 1/2 X 2" BOLT	2 - 1/4 X 3/4" BOLT
4 - 1/2" NUTS	2 - 1/4" NUT
4 - 1/2" LOCK WASHER	2 - 1/4" LOCK WASHER
8 - 1/2" FLAT WASHER	2 - 1/4" FLAT WASHER

STEP 1: Remove front end bumper.

STEP 2: Place front end replacement bumper and bolt on to the frame.

STEP 3: Bolt and adjust replacement with 4 - 1/2 x 2" bolts on each side.

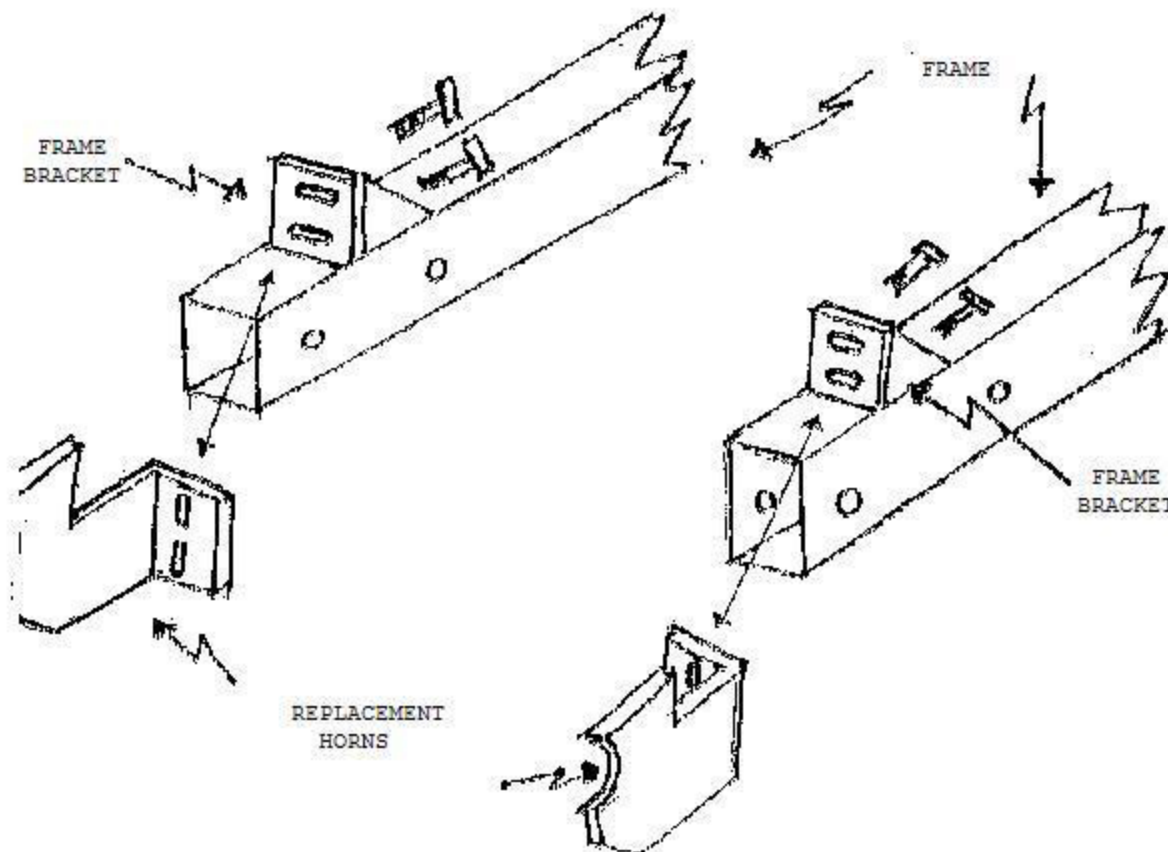

www.cattlemanhd.com

