

CATTLEMAN INSTALLATION SHEET

2005 FORD F250/F350 REPLACEMENT

WINCH KIT

PART # 2350PW

6 - 1/2 x 13 x 2 Bolt
6 - 1/2 Nut
6 - 1/2 Lock Washer
12 - 1/2 Flat Washer

STEP 1: Remove the front bumper.


STEP 2: Do not remove tow hooks; they stay in place.

STEP 3: Mount replacement bumper to the truck frame bracket bolt and adjust replacement with 4-1/2 X 2" bolt on each side.


STEP 4: Remove the lights from light bracket. To remove lights, pull center pin on each side of the light and remove adjustment screw.

STEP 5: Place light on replacement tap. Use the same pins and adjustment screw and spring as shown on drawing.

REPLACEMENT MOUNT

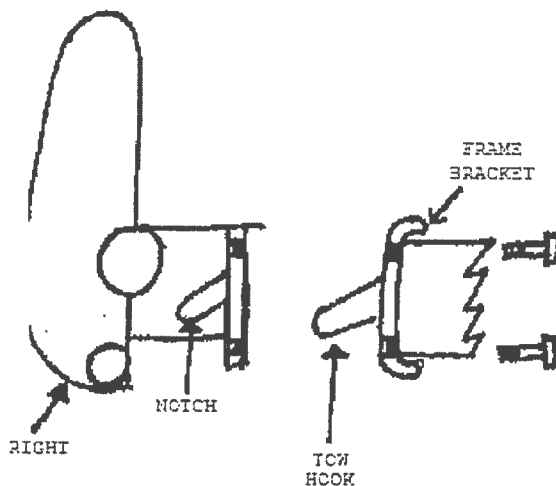

LIGHT MOUNT

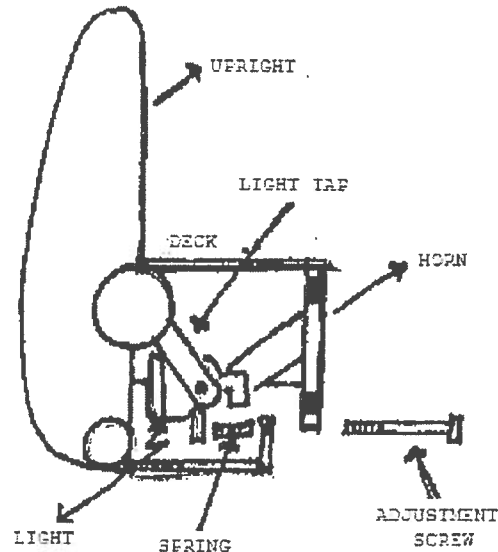

www.cattlemanhd.com

