

# CATTLEMAN INSTALLATION SHEET

## 010-14 DODGE 2500-3500 REAR BUMPER FOR DUALY

4228

### KIT INCLUDES

4 - 1/2 X 2 1/2 Bolt G-8	2 - 1/4 x 3/4 Bolt
4 - 1/2 Nut	2 - 1/4 Nut
4 - 1/2 Lock Washer	2 - 1/4 Lock Washer
8 - 1/2 Flat Washer	82- 1/4 Flat Washer

**Step 1** - Remove factory rear bumper. DO NOT remove the receiver hitch


**Step 2** - Remove 3 factory bolts on the rear side of the frame as shown.

**Step 3** - Put the bumper support bracket on the back of the factory bumper mount and the side of the frame as show.

**Step 4** - Put the replacement rear bumper in place and bolt it together with the side bracket as shown.

**Step 5** - Check alignment on the bumper and tighten bolts.

**Step 6** - You may need to periodically retighten bolts.

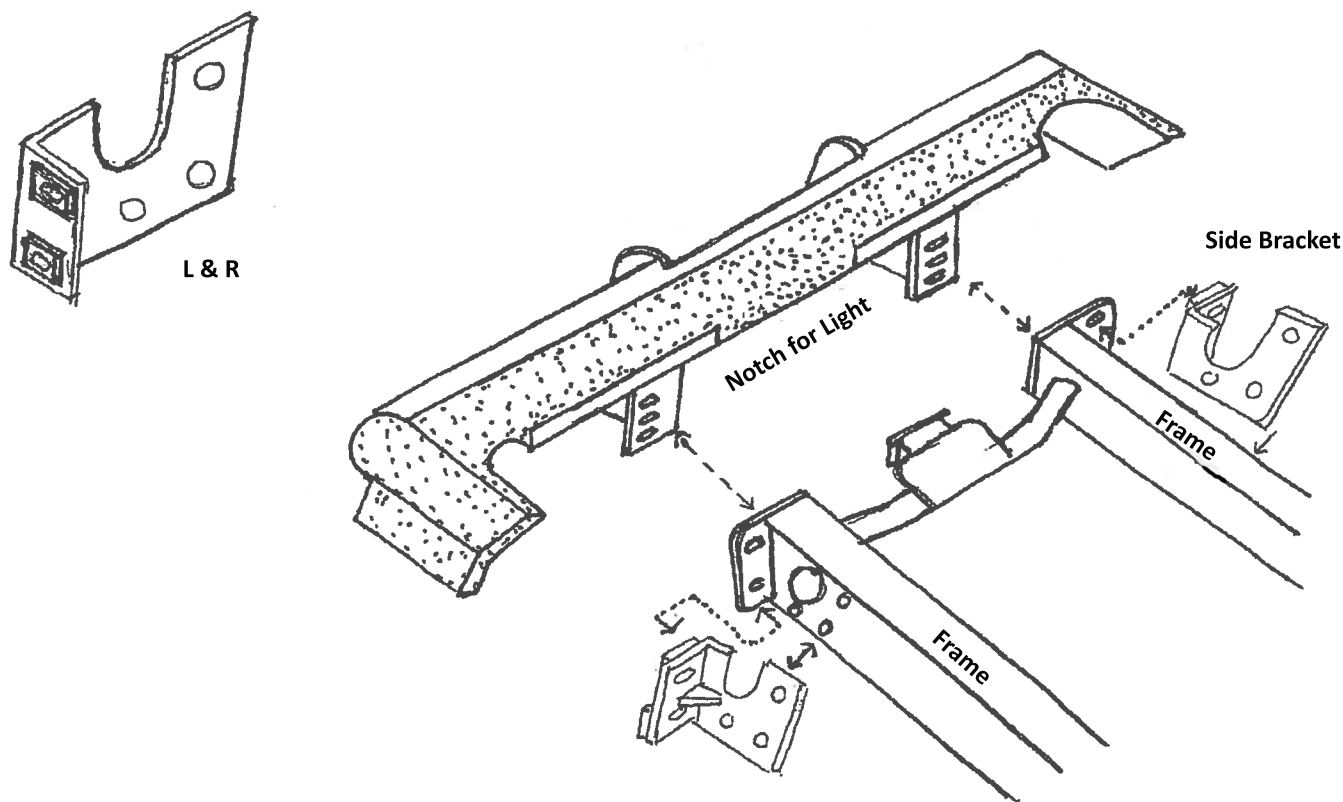

[www.cattlemanhd.com](http://www.cattlemanhd.com)

