

CATTLEMAN INSTALLATION SHEET

006-2013 FORD F150

4338

KIT INCLUDES

4 - 1/2 x 2 Bolt	4 - 1/4 x 3/4 Bolt
6 - 1/2 Nut	4 - 1/4 Nut
6 - 1/2 Lock Washer	4 - 1/4 Lock Washer
12 - 1/2 Flat Washer	8 - 1/4 Flat Washer
	1 - Plug Bracket


Step 1 - Remove factory rear bumper and remove trailer plug.

Step 2 - Put new rear bumper in place and bolt on.

Step 3 - Check alignment on the rear bumper and tighten bolts.

Step 4 - Put trailer plug bracket on the bottom side of the wing as shown.

(Note: You may need to periodically retighten bolts. You may also lose your receiver hitch)

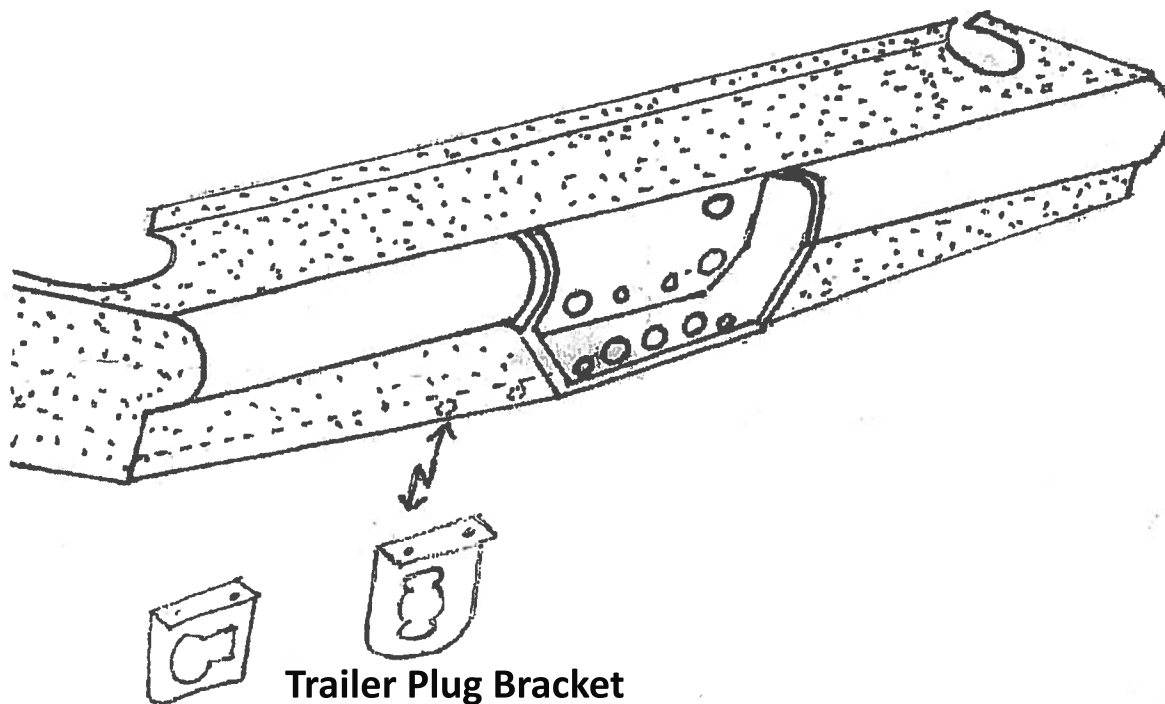

www.cattlemanhd.com

