


CATTLEMAN INSTALLATION SHEET

99-04 FORD F250 - F350 REPLACEMENT
99-04 FORD F250 - F350 REPLACEMENT W/RECEIVER


PART# 2300
PART# 2300PR

- STEP 1 REMOVE FRONT BUMPER
STEP 2 TOW HOOKS STAY IN PLACE
STEP 3 MOUNT REPLACEMENT BUMPER TO THE TRUCK FRAME BRACKETS. BOLT AND ADJUST REPLACEMENT BUMPER WITH (4) 1/2" X 2" BOLTS ON EACH SIDE.
STEP 4 REMOVE THE LIGHT BRACKET FROM BUMPER. PLACE LIGHT BRACKET TO THE METAL, TAP UNDER THE TOP DECK, AND BOLT A ZEE BRACKET TO REPLACEMENT HORN AND TO THE LIGHT BRACKET AS WELL. SEE IMAGE

Replacement Mount

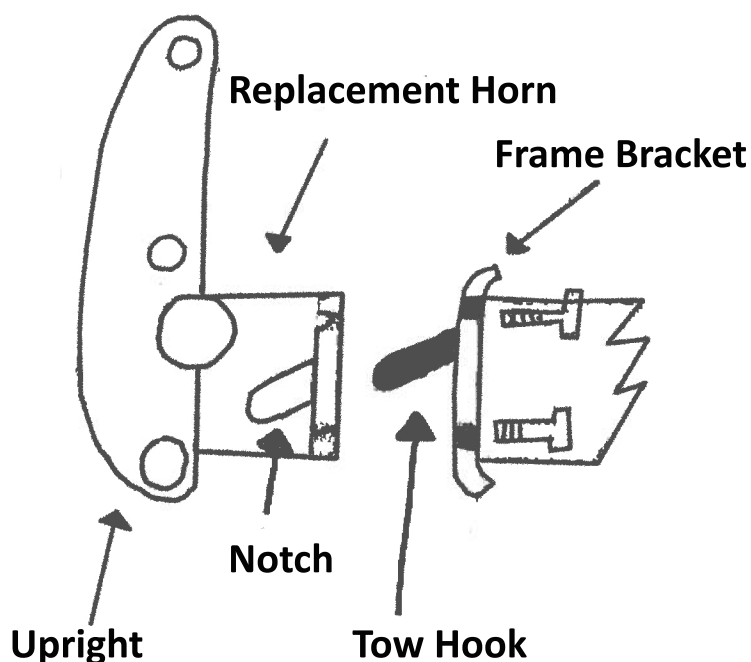

Light

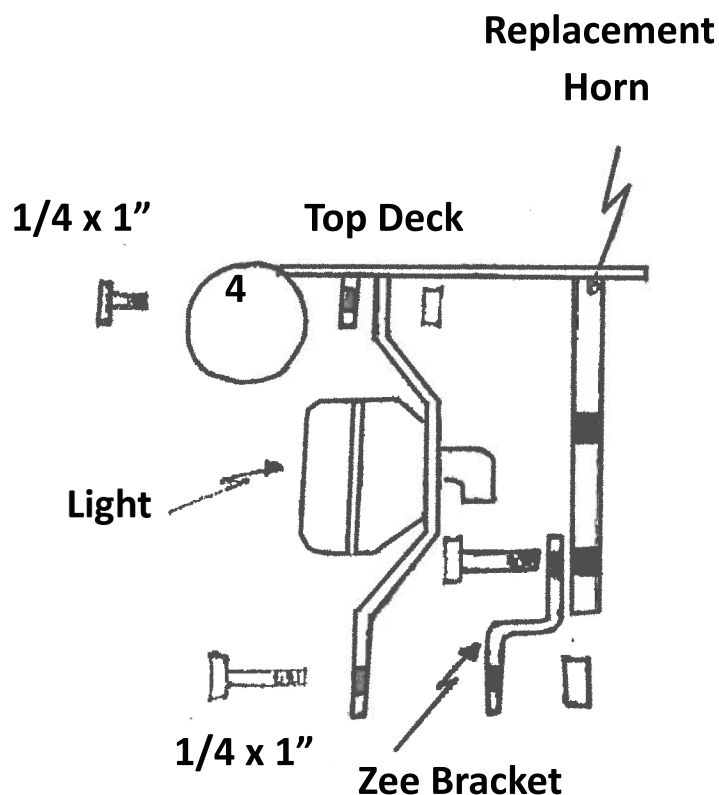

www.cattlemanhd.com

