

CATTLEMAN INSTALLATION SHEET

92-96 FORD F150

92-97 FORD F250

PART # 1330

INSTALLATION KIT

8 - 1/2 X 2" BOLTS
8 - 1/2" NUT
8 - 1/2" LOCK WASHER
16 - 1/2" FLAT WASHER

STEP 1: Remove factory bumper.


STEP 2: Place "Z" brackets inside the factory bumper as shown.

STEP 3: Bolt factory bumper back on with "Z" bracket in place to your truck.


STEP 4: Place grille guard to the front of your truck, check alignment and drill 9/16" holes.

STEP 5: Bolt grille guard to the front end and to the bottom strap with a "L" bracket as shown.

GRILL GUARD MOUNT

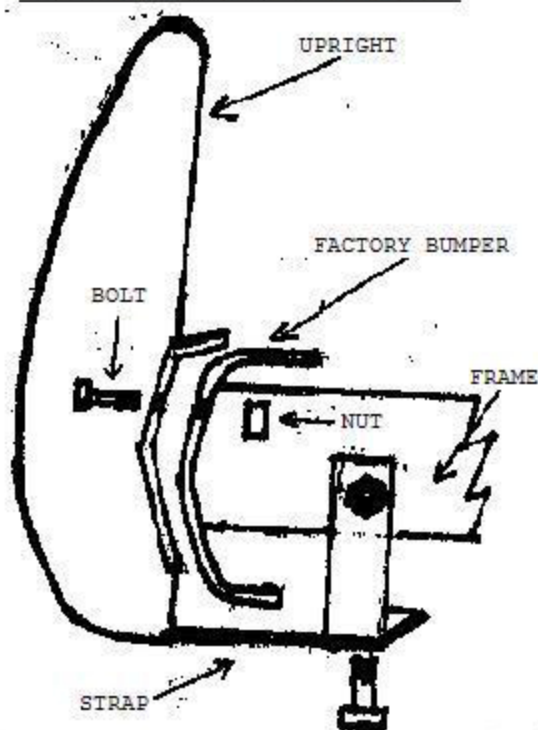

"Z" BRACKET MOUNT

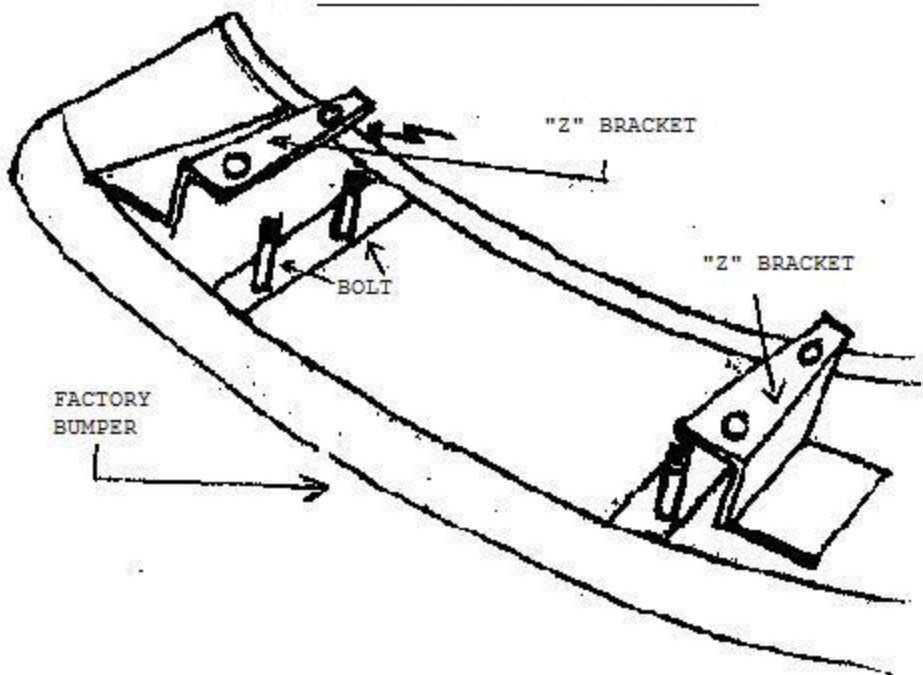

www.cattlemanhd.com

